




5-PIN CONNECTOR


ASSEMBLY INSTRUCTIONS

Note: If you are not experienced in soldering small wires, we highly recommend you seek assistance from someone who is experienced.

CALL TECHNICAL SERVICE WITH QUESTIONS 1-800-367-7109

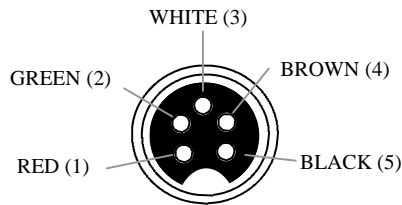

(as viewed from the front. Note notch orientation)

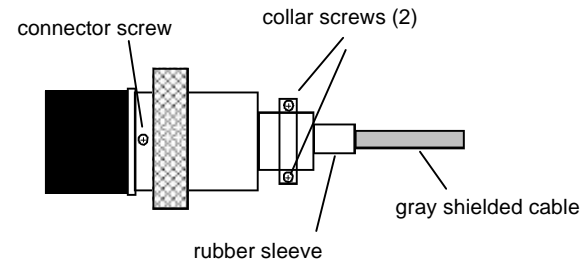

(as viewed from the side).

1. Disconnect the two collar screws and the one connector screw.
2. Pull connector apart, exposing the wires. The black plastic piece will separate from the silver connector body.
3. Match wire colors to numbered holes. Make sure the notch in the black plastic is at the “6 o’clock” position.
4. Carefully solder wires.
5. Wrap rubber sleeve around the gray shielded cable. Position it so that half of its length is inside the silver connector body.
6. Re-assemble the black plastic piece into the connector body.
7. Tighten the one connector screw.
8. Tighten the two collar screws.

Make your connection last — grasp only by the silver metal body.